P8

without drive unit / two sided rail

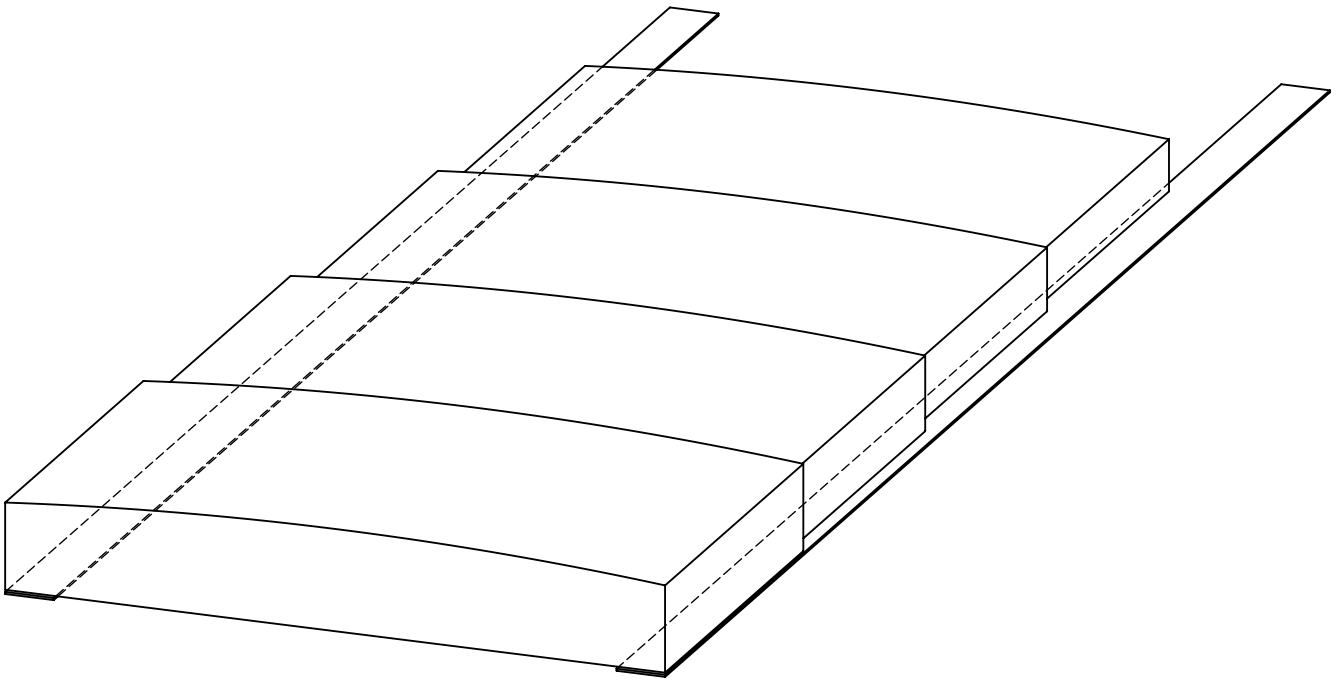

Manual

Installation of Pool Enclosure P8
without drive unit, two sided rail

line **PRESTIGE**

popp

COVER POSITION

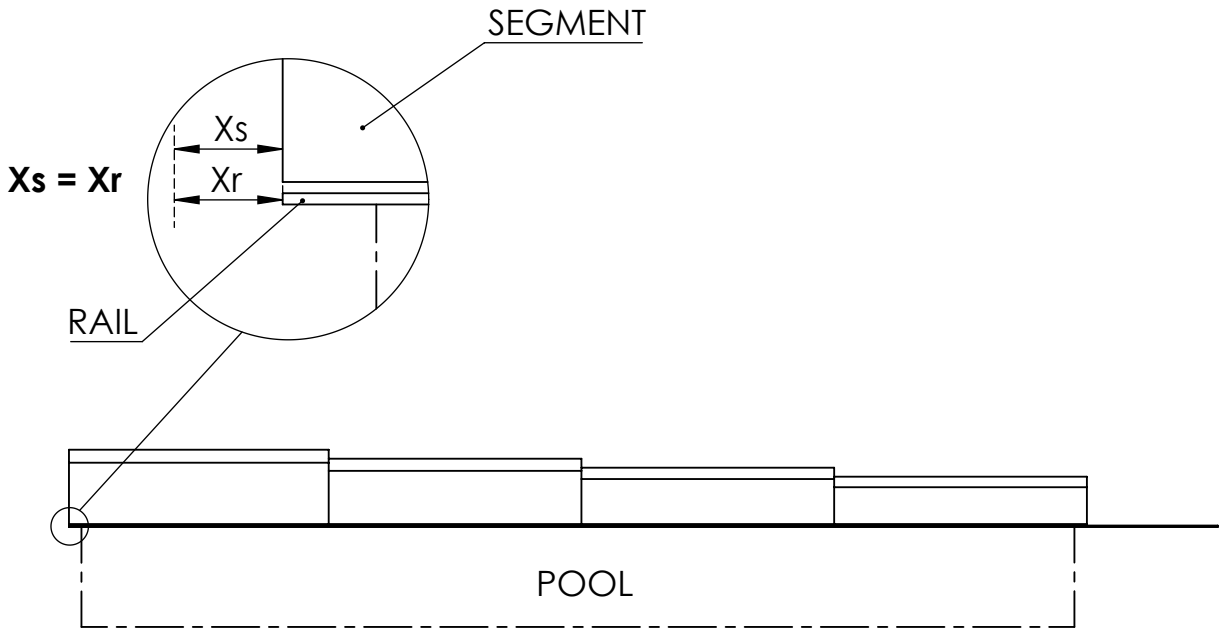

D1 = D2 !

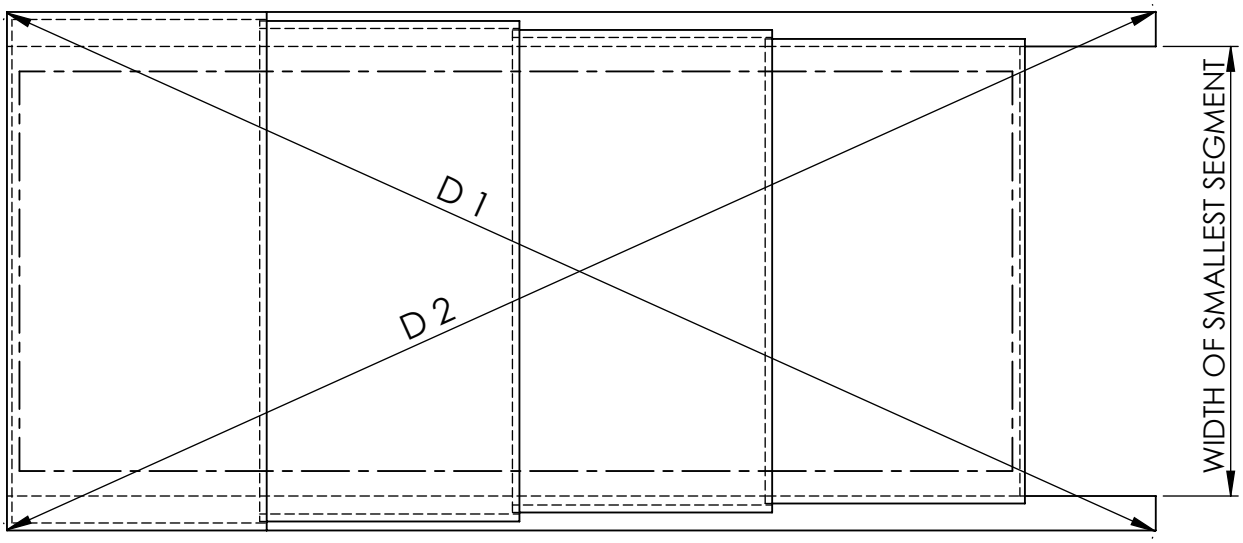

RAILS POSITION

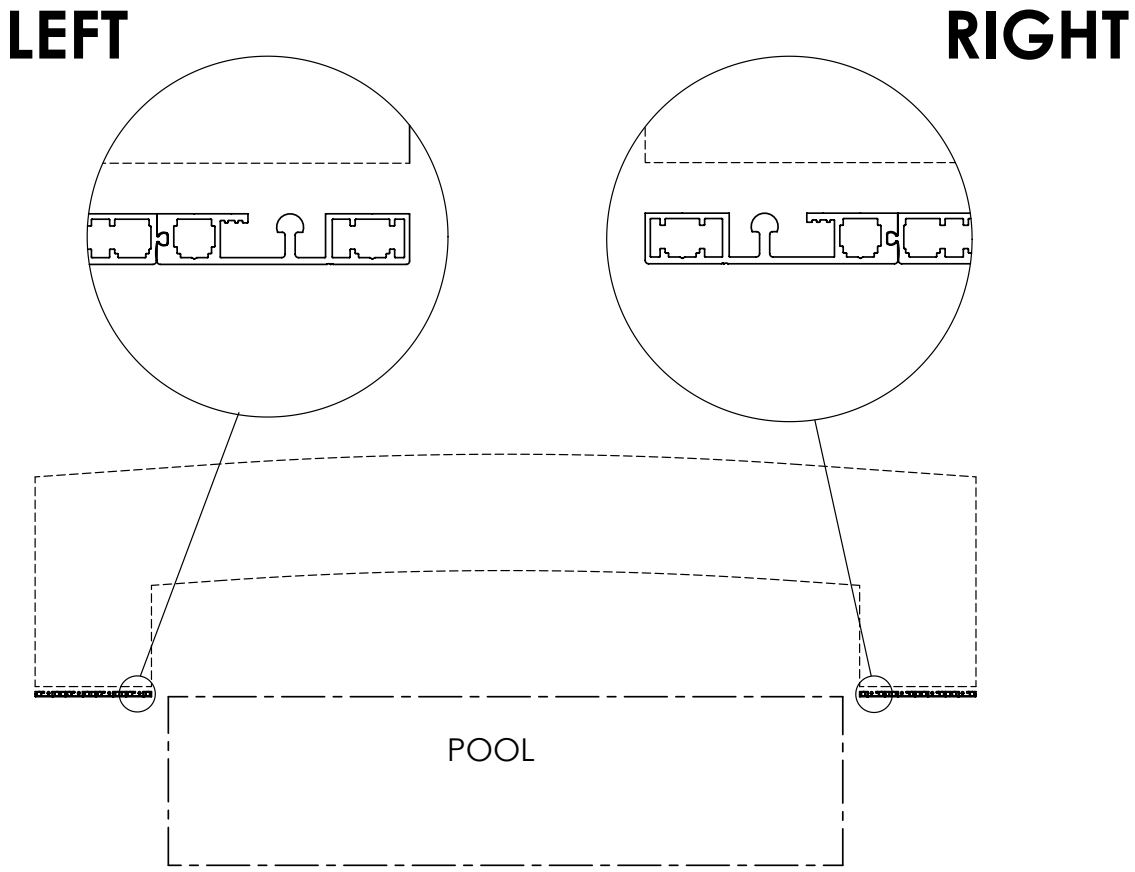

RAIL MOUNTING

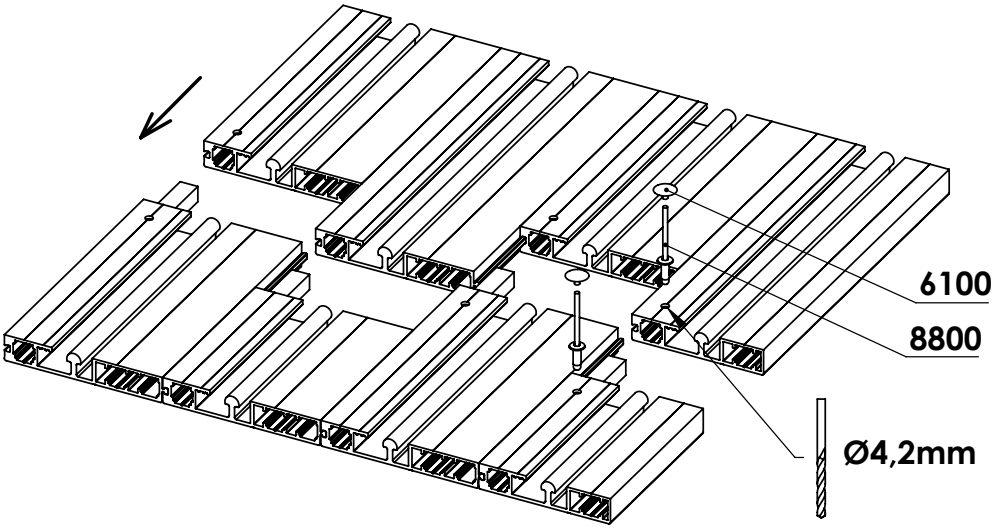

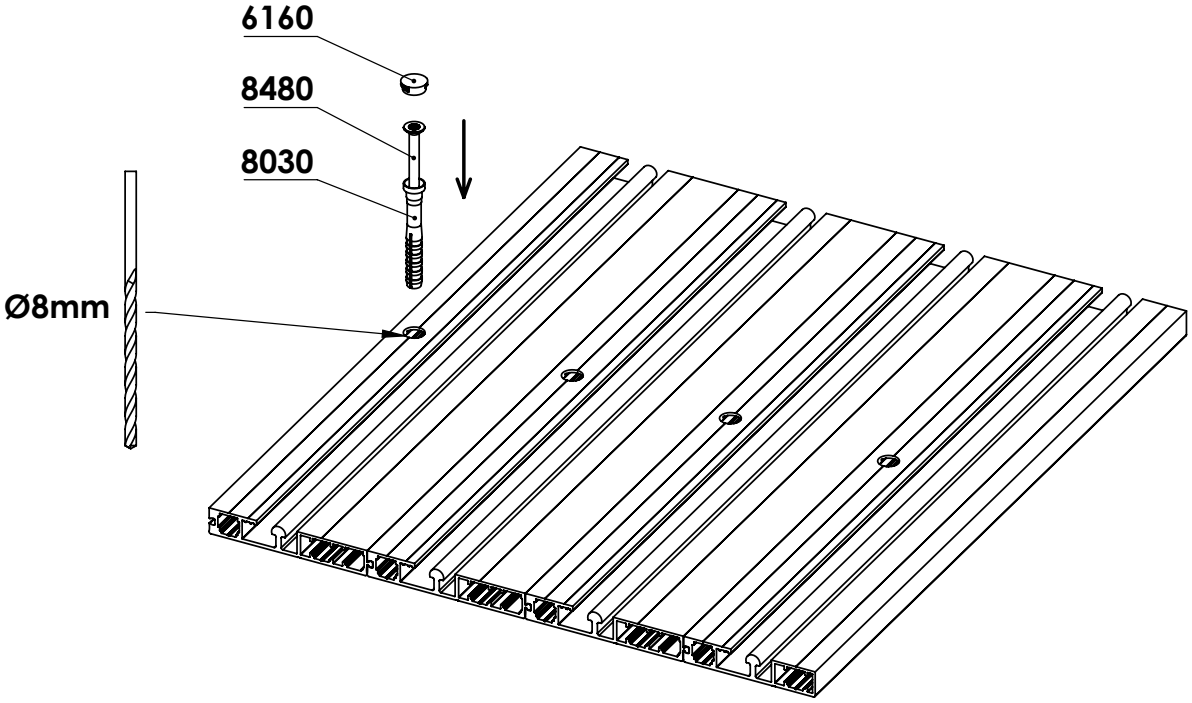

PARTS:

8480 - Ø5x60

8800

6100

8030 - Ø8x60

6160

COLLECTING, GUIDING AND ARETATION ELEMENTS
FIXED FACADE + TILTING SEAL

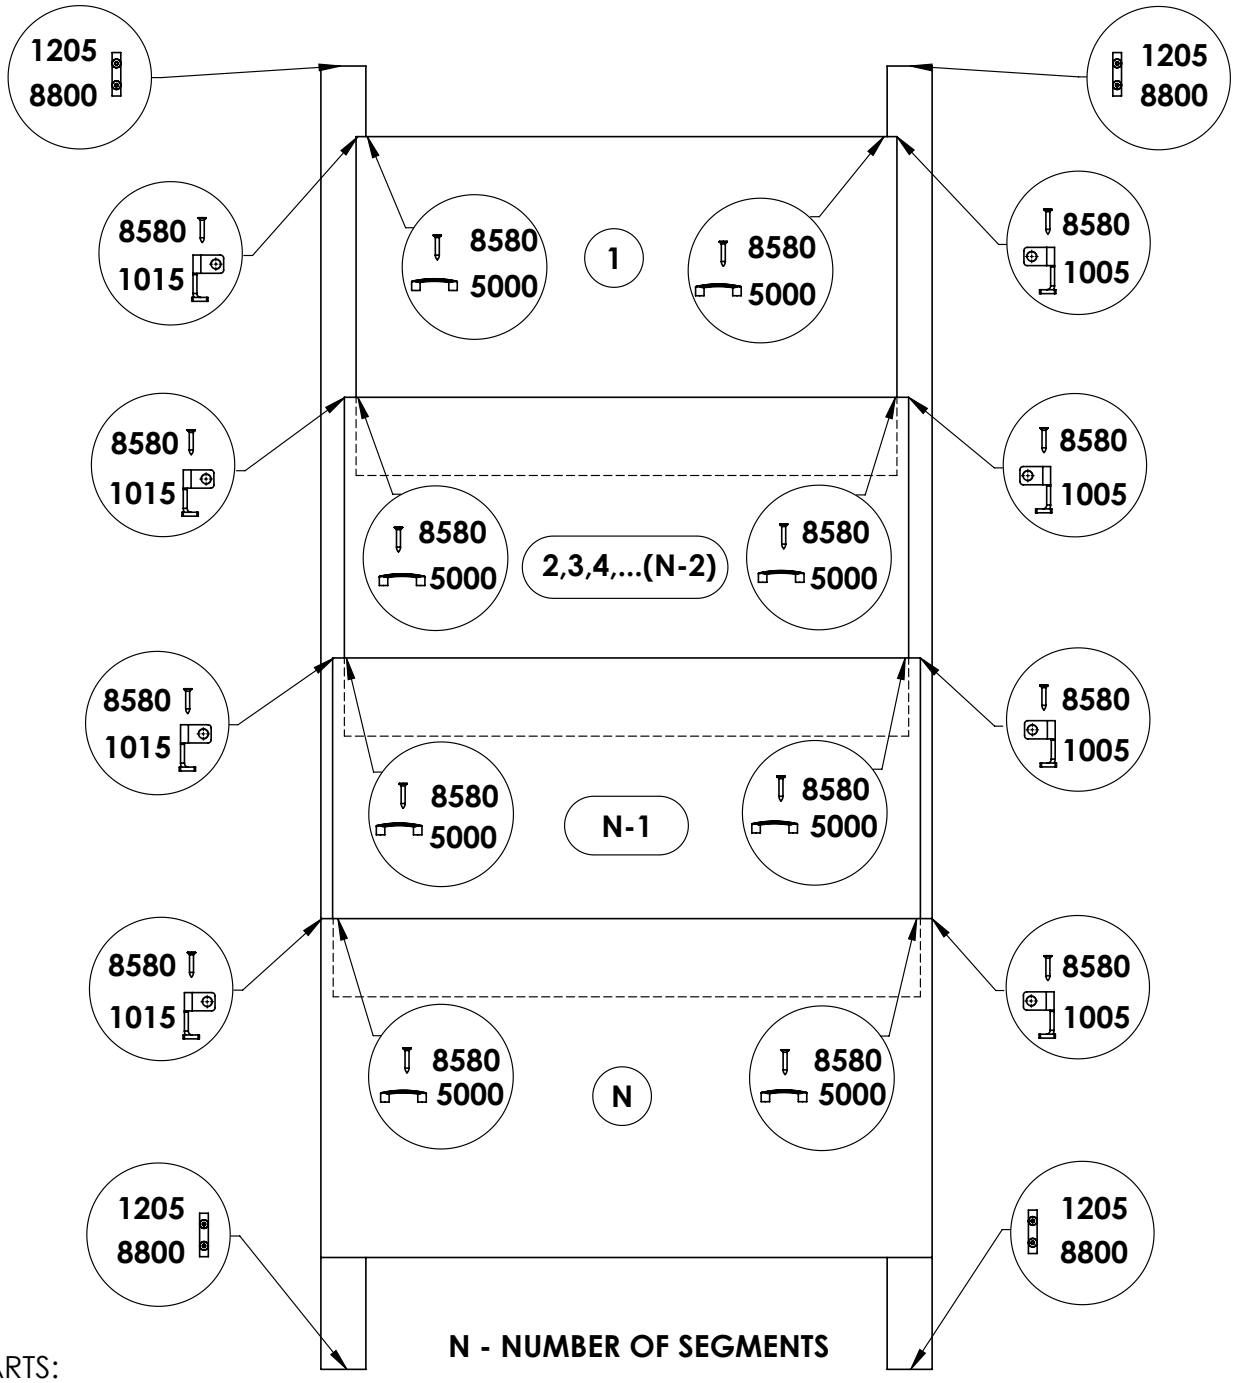

PARTS:



1015

1205 - 8x10x40

8580 - Ø6,3x38



1005

8800 - Ø4x10

5000

COLLECTING, GUIDING AND ARETATION ELEMENTS
SEMIAUTOMATIC TILTABLE FRONT + DOORS FACADE

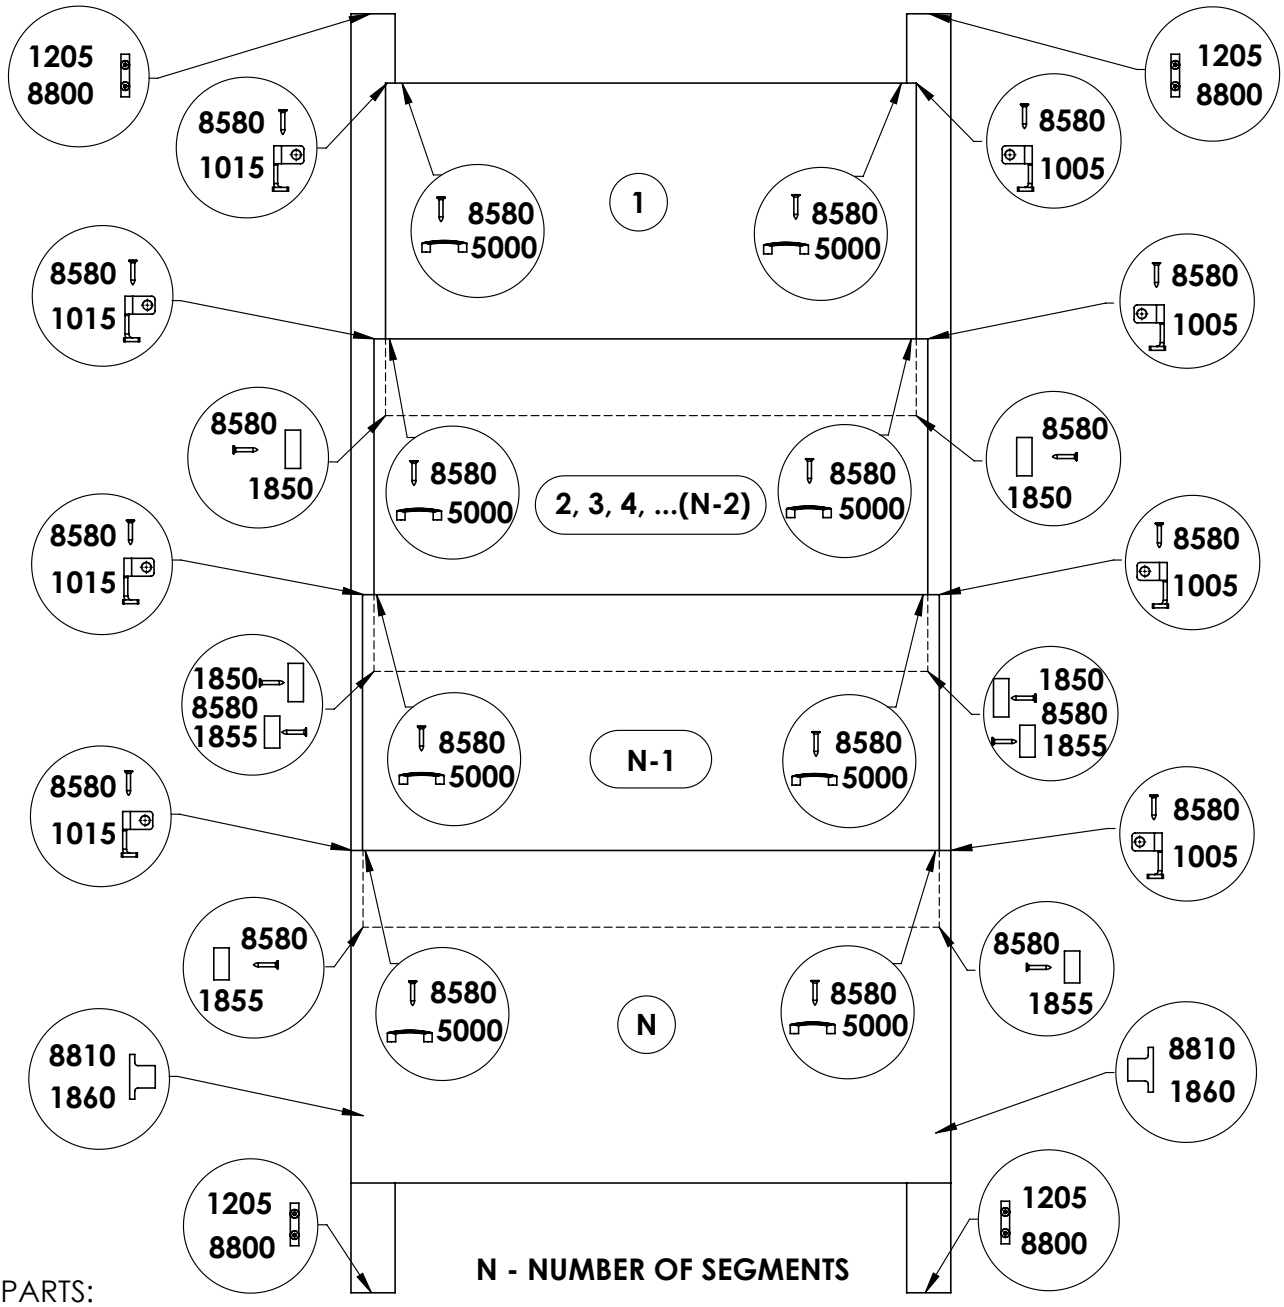

PARTS:


1015

1850

1860

8800 - Ø4x10


1005

1855

1205 - 8x10x40

8810 - Ø4x12

5000

8580 - Ø6,3x38

PLACING THE HOOK

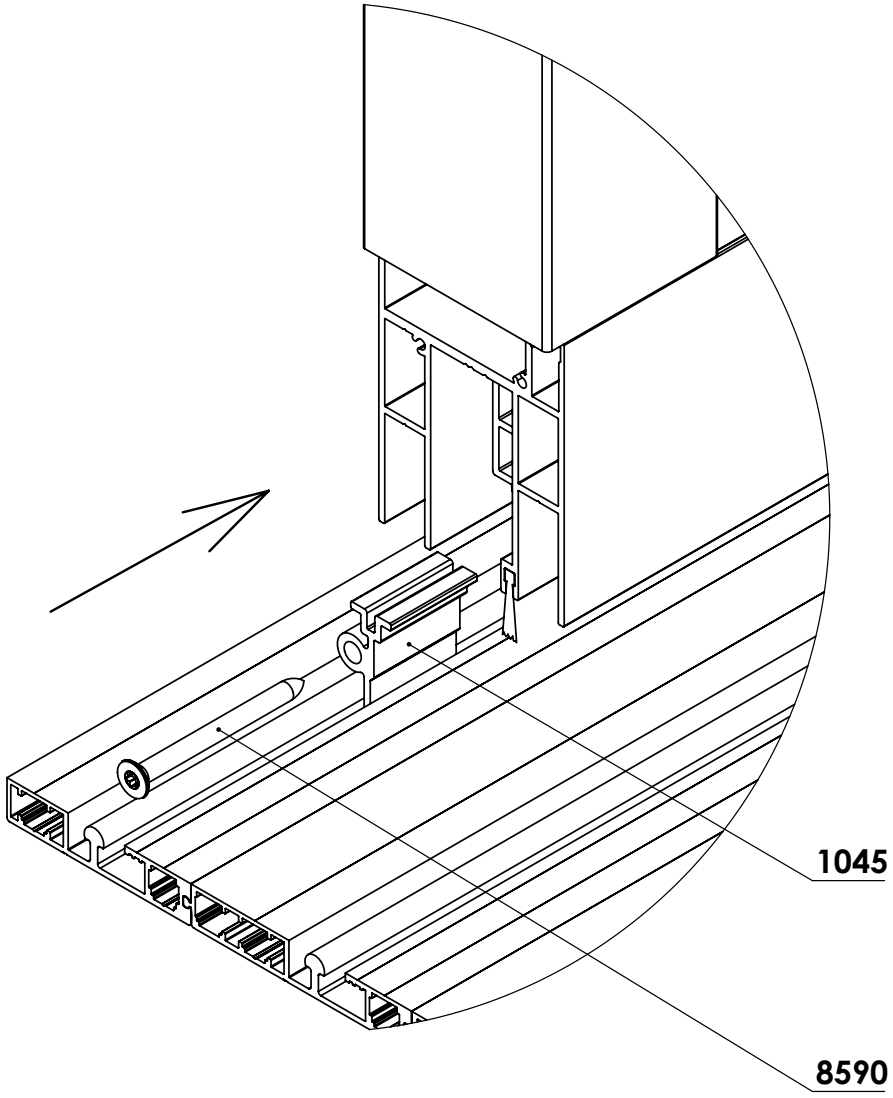

PARTS:

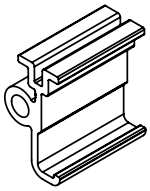

1045



8590 - Ø6,3x70

INSTALLATION OF LOCKING BOLT HOLDER

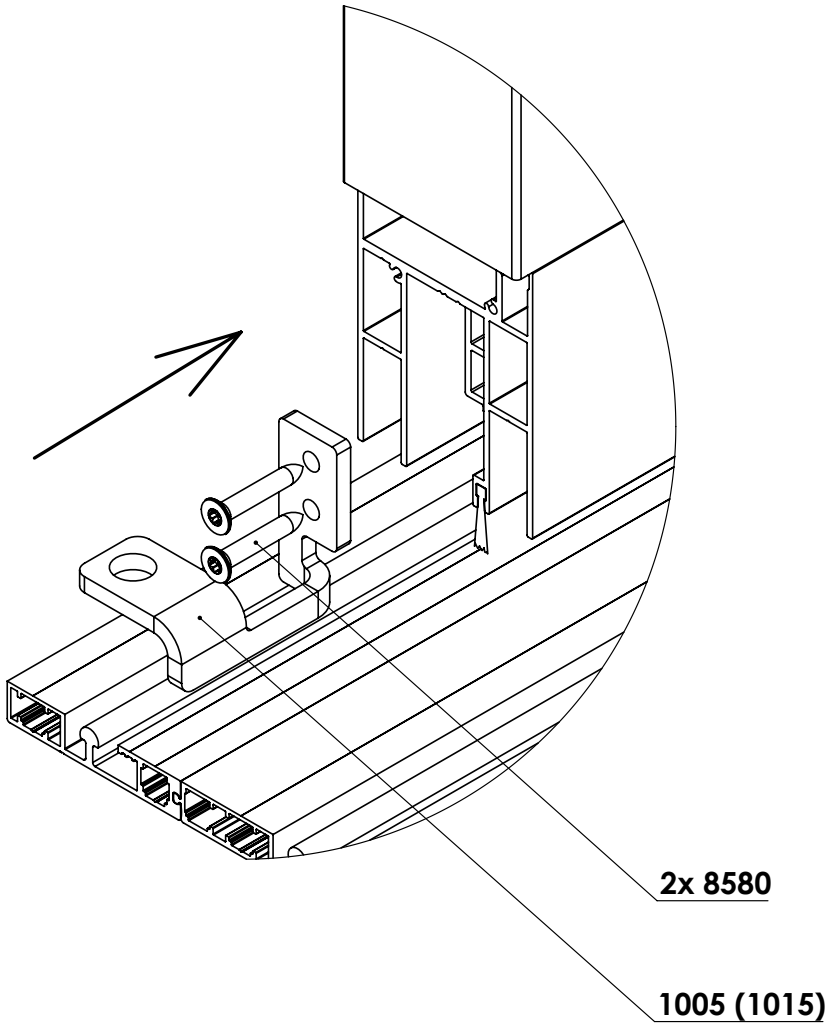

PARTS:



1015

8580 - Ø6,3x38



1005

INSTALLATION OF LOCKING BOLT

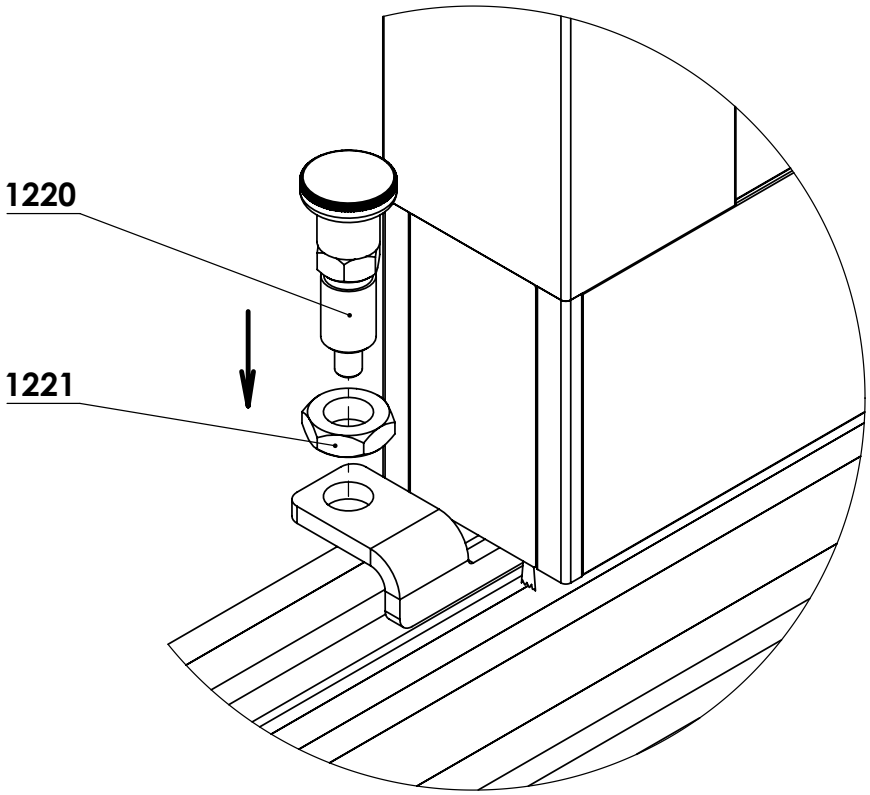

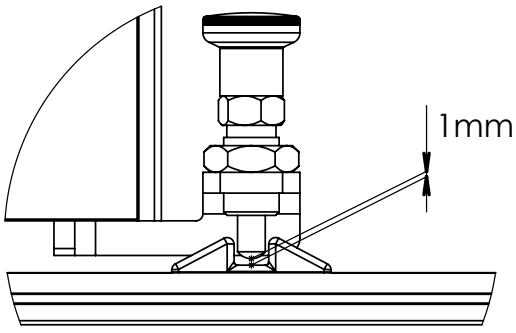

PARTS:

1220

1221

INSTALLATION OF FIXING PYRAMID WITHOUT HELPING TOOL

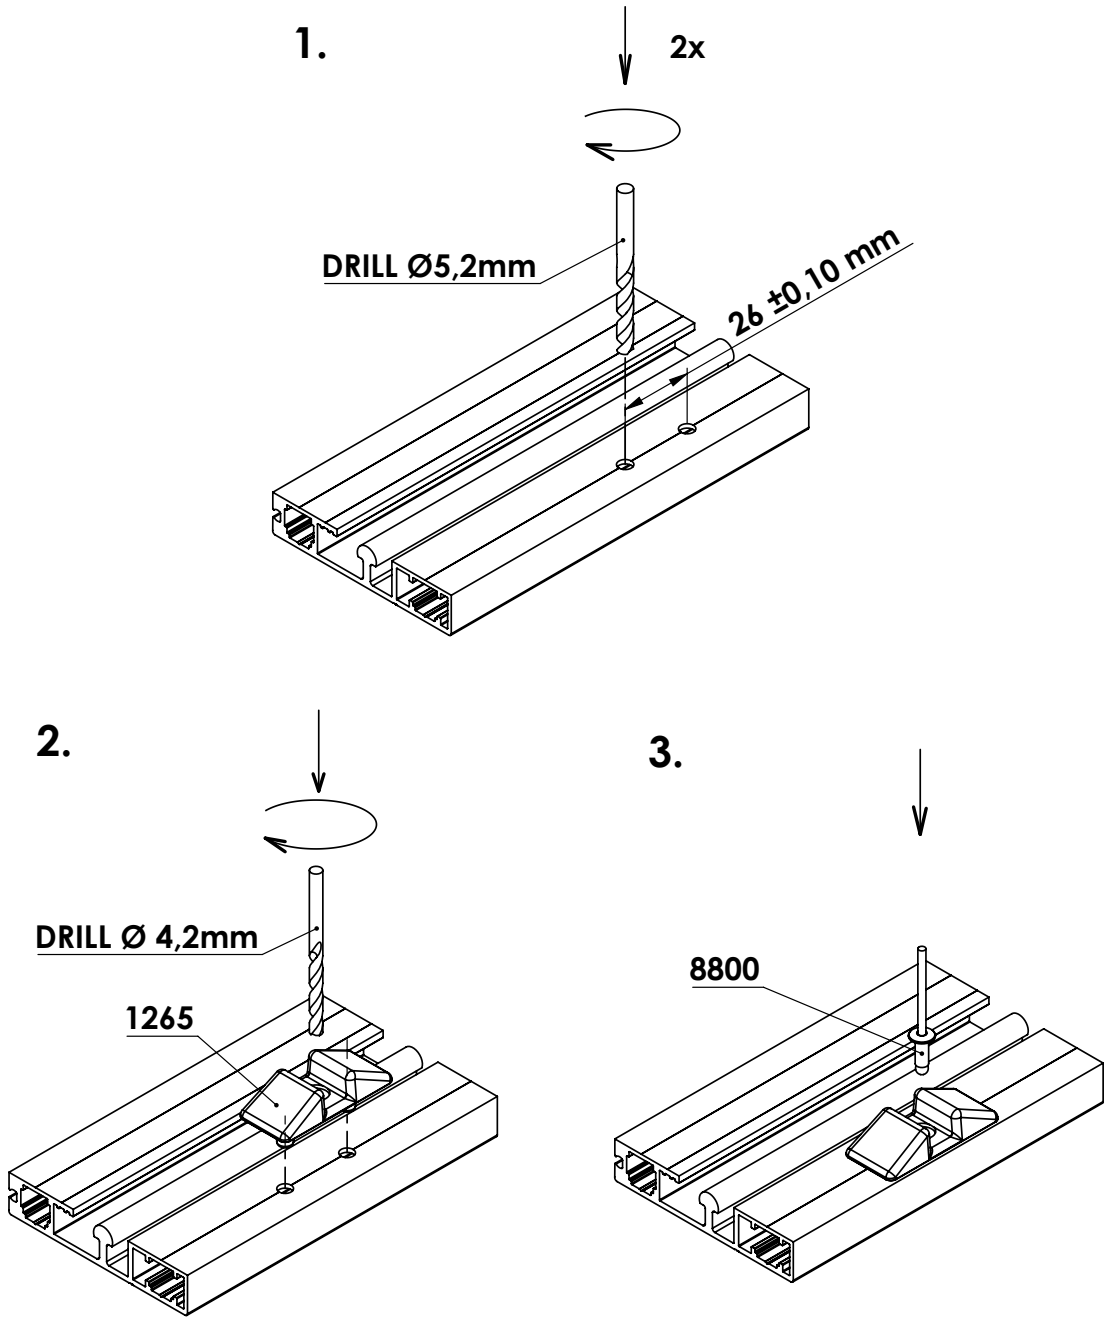

PARTS:

1265

8800

INSTALLATION OF FIXING PYRAMID

1.

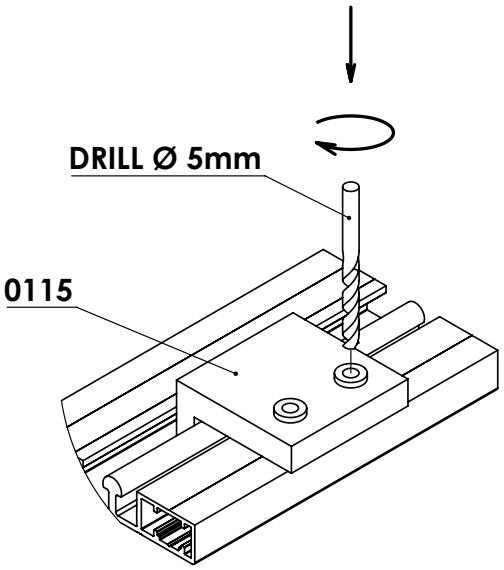

2.

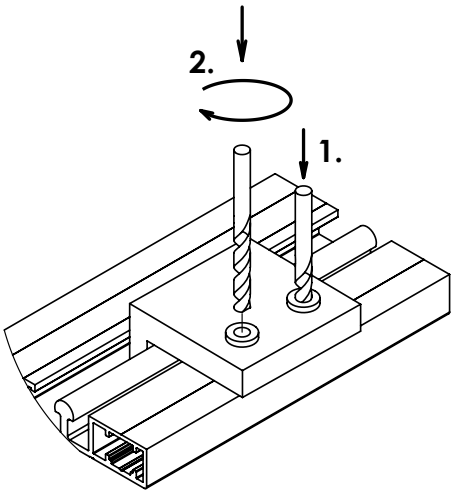

3.

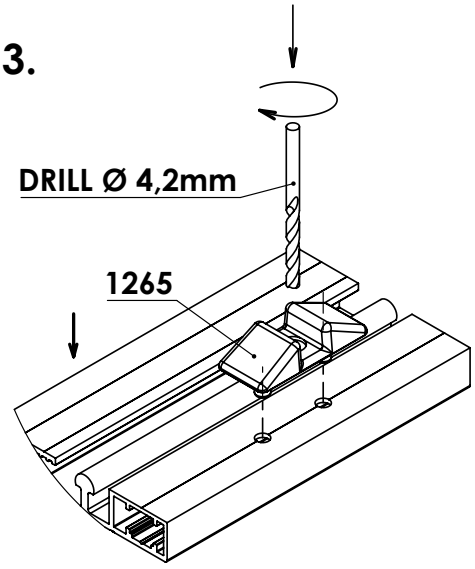

4.

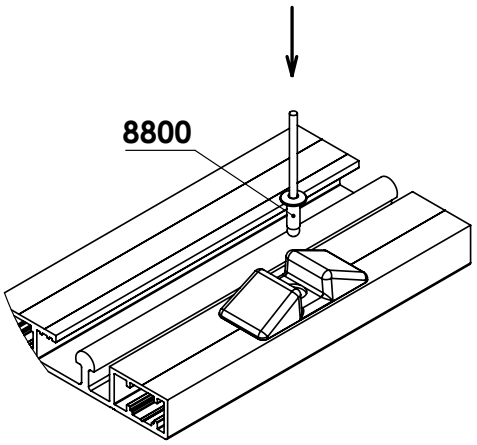

PARTS:



0115

8800

1265

PLACING OF STOP ELEMENTS FOR SEGMENTS

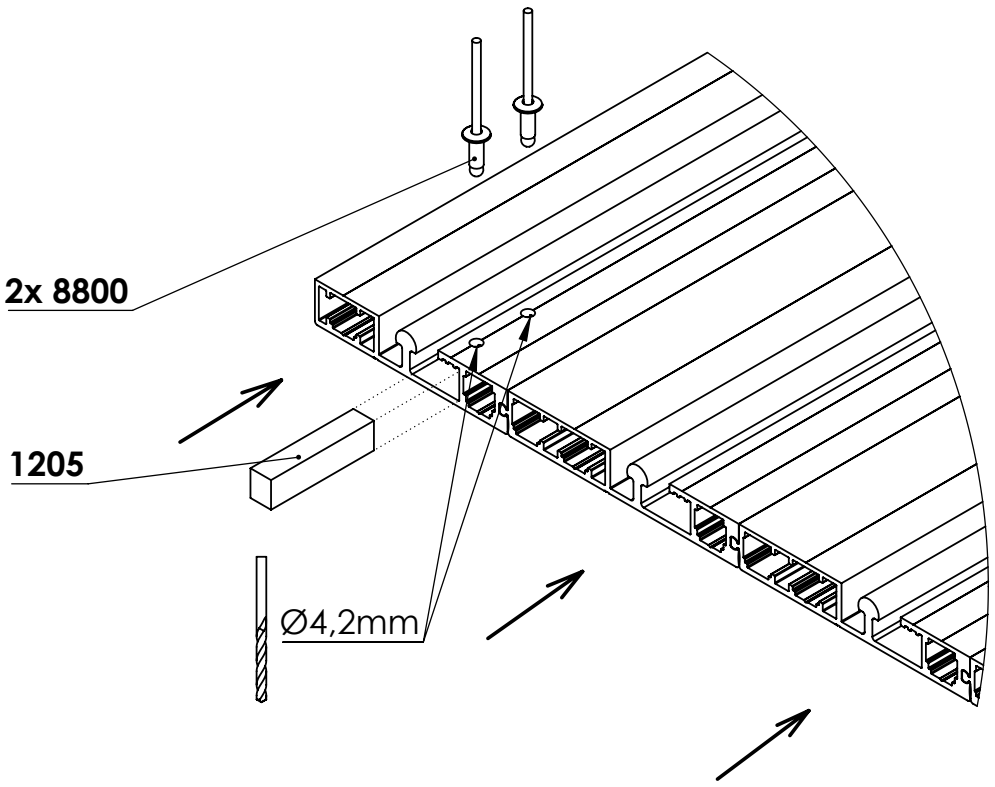

PARTS:



1205



8800 - Ø4,0 x 10

PLACING OF BLING PLUG OF RAIL

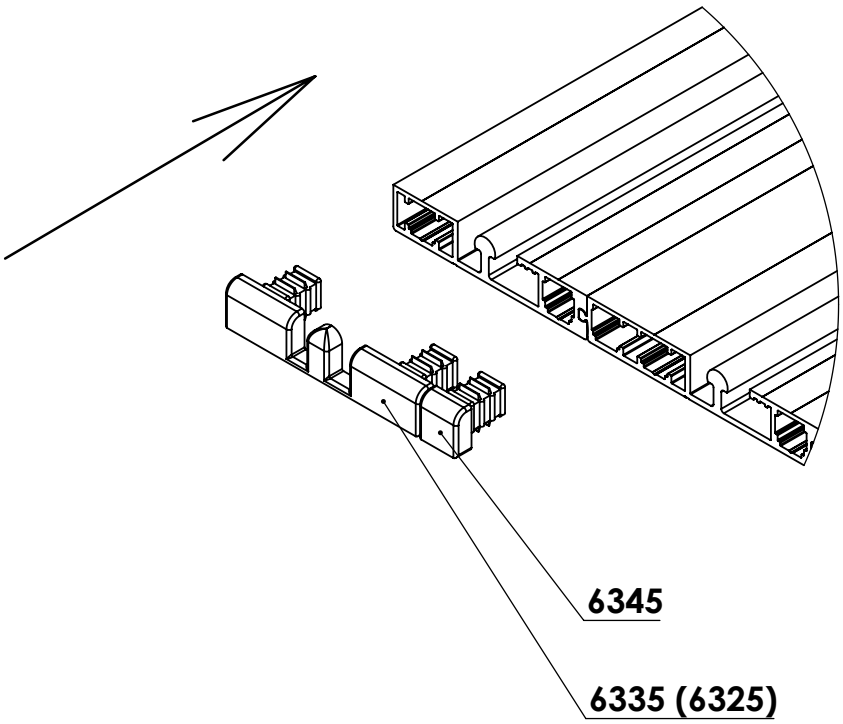

PARTS:

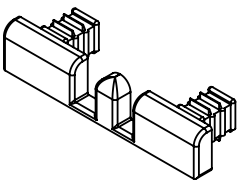

L 6325

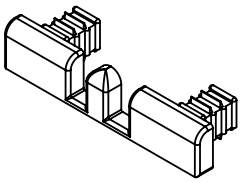



R 6335



6345

PLACING OF BLIND PLUG OF PROFILE

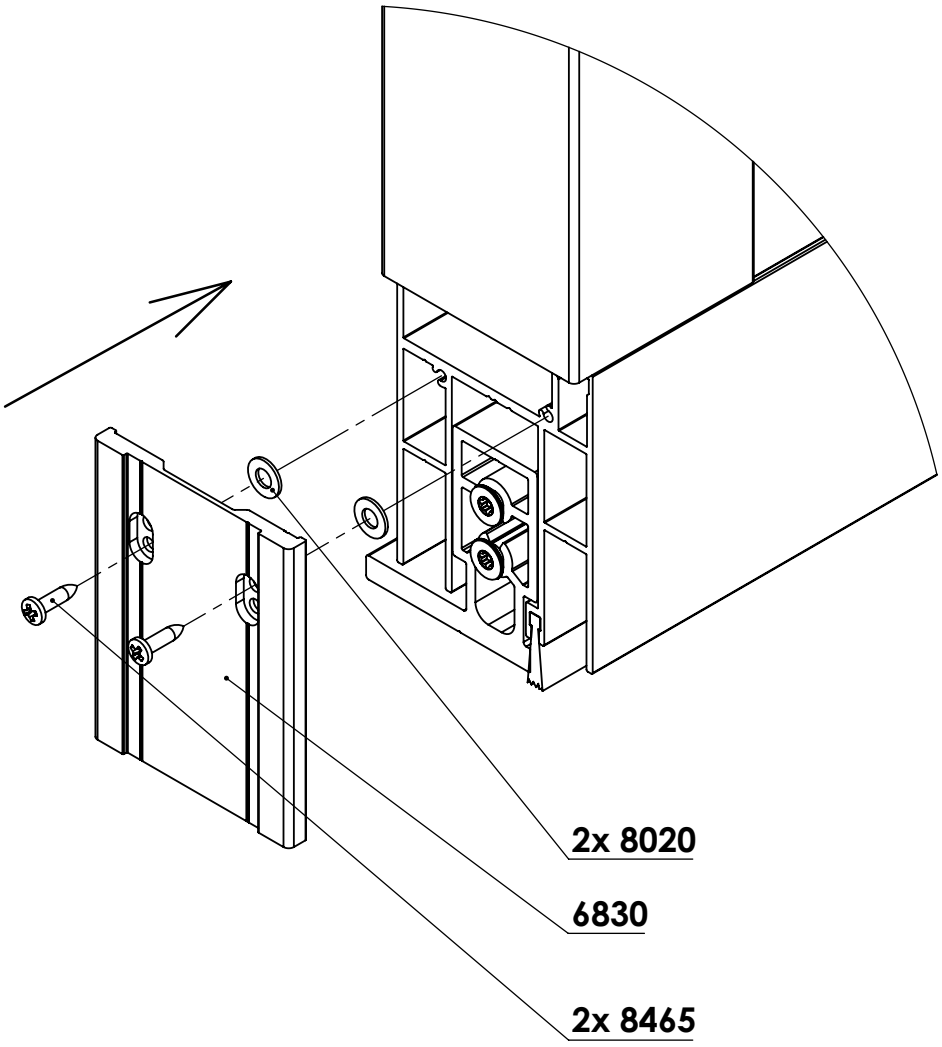

PARTS:



6830

8020 - Ø6,4x12x1

8465 - ∅3,9x16

PLACING OF COVER PLATE

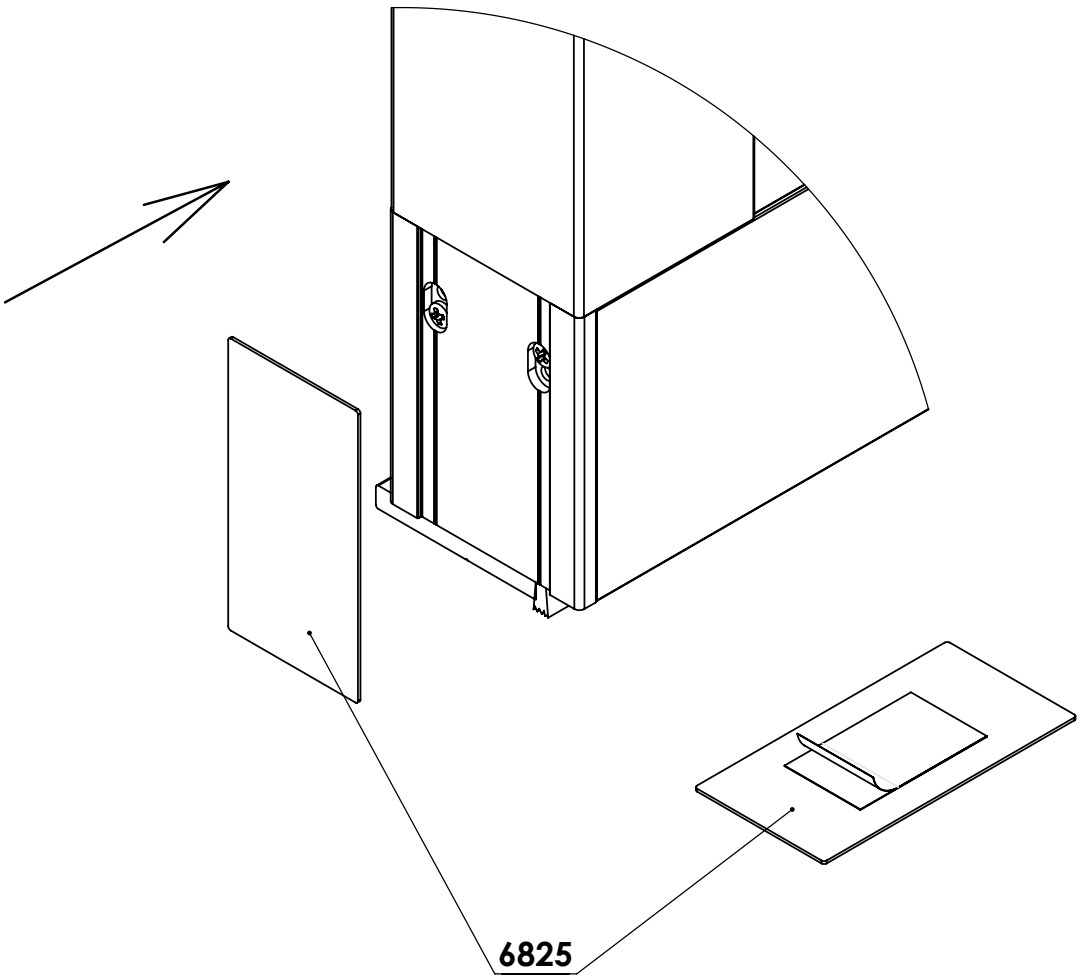

PARTS:



6825

INSTALLATION OF HANDLE

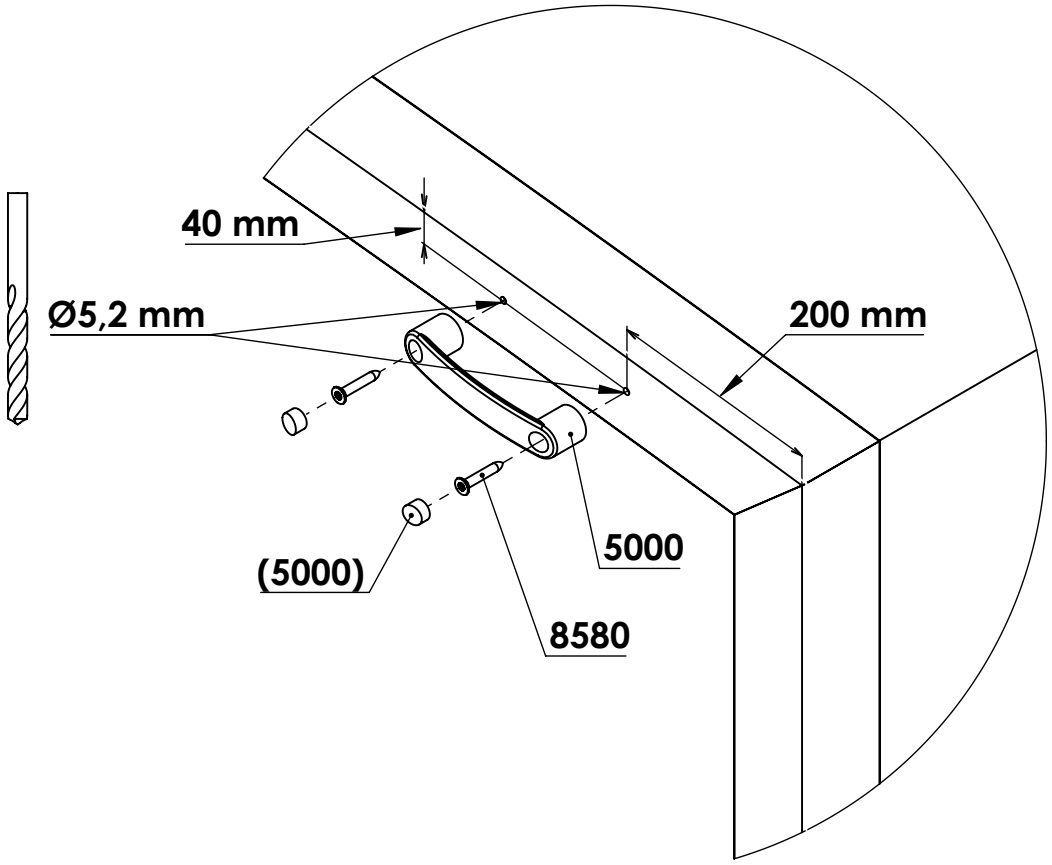

PARTS:

5000

Ø6,3 x 38

INSTALLATION OF SHOCK ABSORBER HOLDER
SEMIAUTOMATIC TILTABLE FRONT + DOORS FACADE

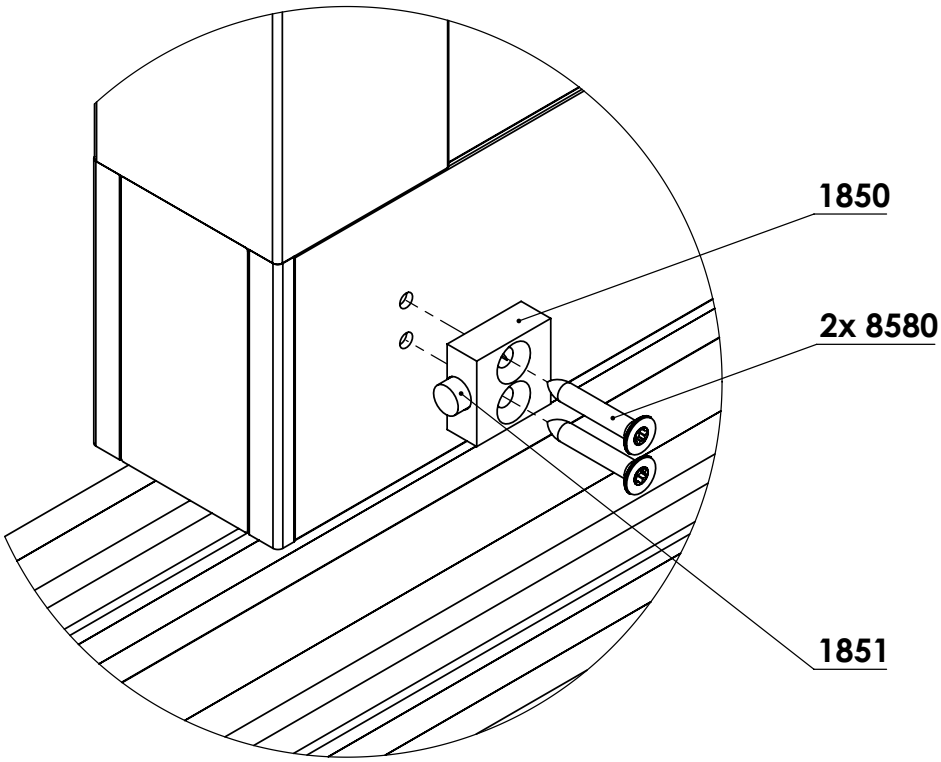

PARTS:



1850

1851

8580 - Ø6,3x38

INSTALLATION OF COLLECTING CUBE
SEMIAUTOMATIC TILTABLE FRONT + DOORS FACADE

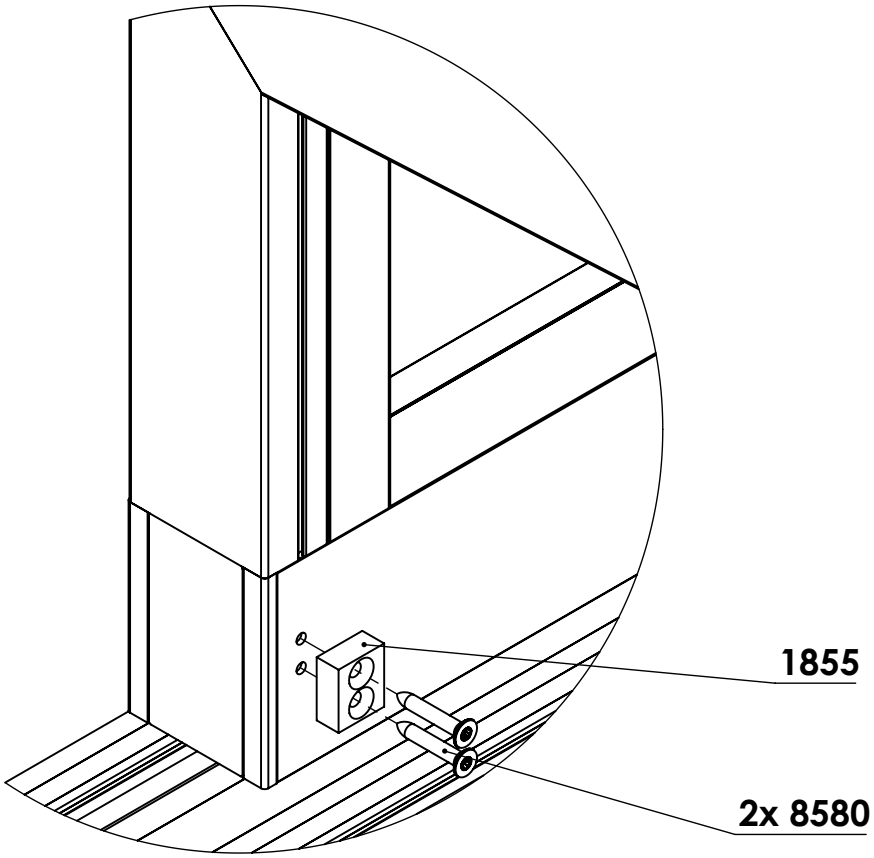

PARTS:



1855



8580 - Ø6,3x38

PLACING OF COLLECTING ELEMENTS FACADE
SEMIAUTOMATIC TILTABLE FRONT + DOORS FACADE

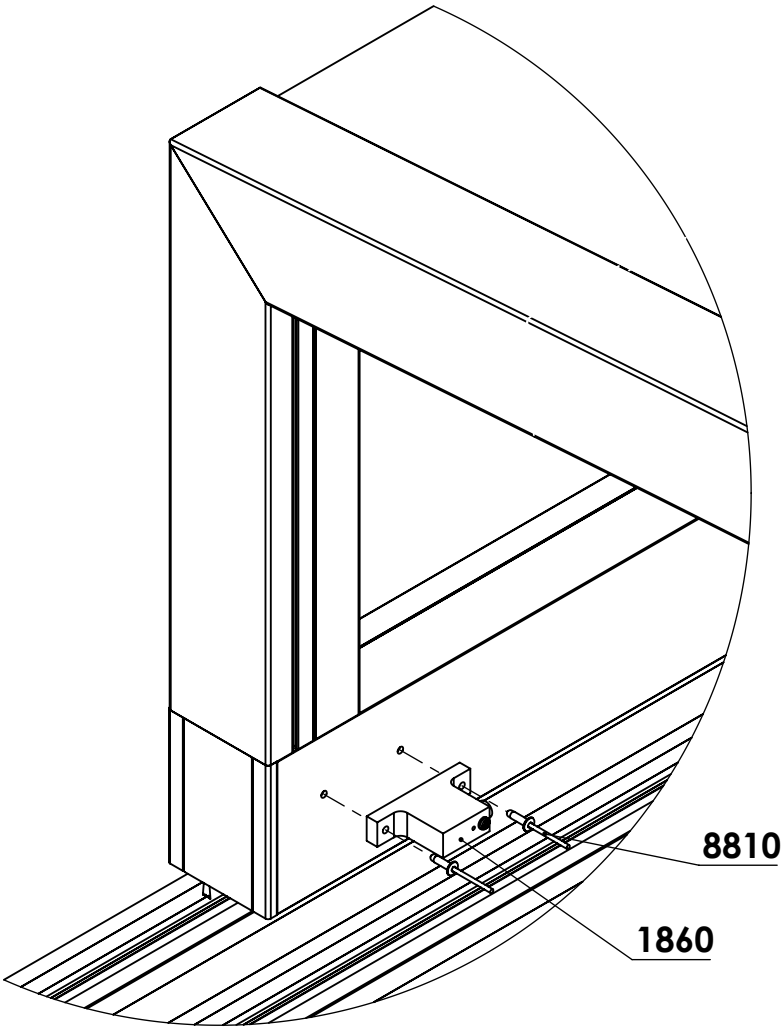

PARTS:



1860

8810 - Ø4 x 12